



Installation Information Sheet



Plastic Security Pad and sureMOUNT

This system of a detachable security pad and product stabilizing sureMOUNT is an economical solution for displaying your merchandise.

The only requirement for the sureMOUNT is that a 3/4" is drilled into your display or fixture.

If you require to retrofit existing displays there are many add-ons that can be implemented to help make this solution work.




1. Turn the sureMOUNT over.



2. Remove the 3M tape backing



3. Place sureMOUNT over the 3/4" hole.

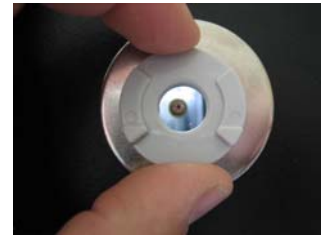

4. Be sure the two bottom tips are straight.



5. Pull the cable through the sureMOUNT.



6. Place the copper stop into the hole on top of the pad.



7. Bring the cable over to the slot and then pull up.



8. Place the 3M tape ring onto the bottom of the pad.



9. Remove the tape backing from the tape ring.



10. Place on the rear of the phone ensuring the two wing are at the 9 and 3 o'clock position.



Contact information:

RETAIL TASKFORCE

4557 The Grange Side Road
Caledon, ON L7C 0G3 Canada

Phone (905) 584-6826

Fax (905) 584-6827

eMAIL help@retailtaskforce.com